

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

 
Carefully observe all warnings, precautions and instructions on the appliance and described in the operating instructions supplied with the appliance by Sony.

INSTALLATION


Water and Moisture — Do not install the appliance near water: for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.




Heat — Do not install the appliance near sources of heat such as radiators, heat registers, stoves, or other appliances that produce heat.

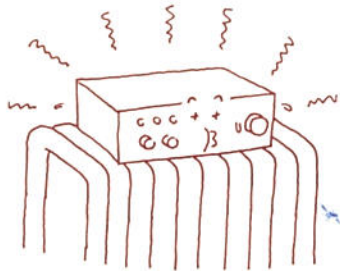

 
Ventilation — Slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable and safe operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.

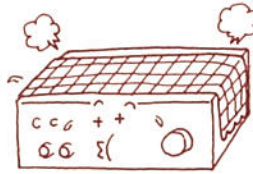

 
— Do not place the appliance on a bed, sofa, rug or other similar surface which may block the slots and openings.

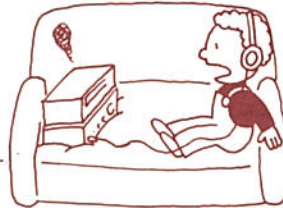

 — Do not install the appliance in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

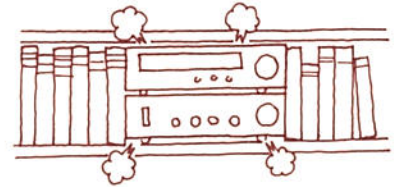

 
Carts and Stands — Do not install the appliance on an unstable table, shelf, cart or stand. Use only a cart or stand recommended by Sony.

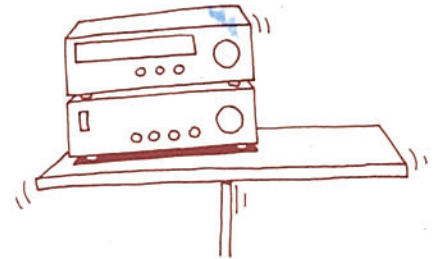


Wall or Ceiling Mounting — If your appliance can be mounted to a wall or ceiling, mount it only as recommended by Sony.

USE

 Power Source — Connect the appliance to a power supply only of the type described in the operating instructions or as marked on the appliance.

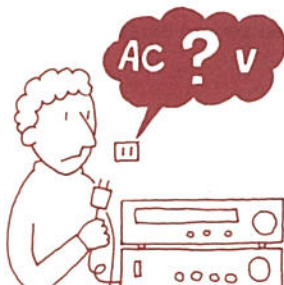

 Grounding or Polarization — Do not defeat the grounding or polarization feature of the AC power cord. If your AC receptacle will not accept the power cord plug, contact your electrician to install a proper AC receptacle.

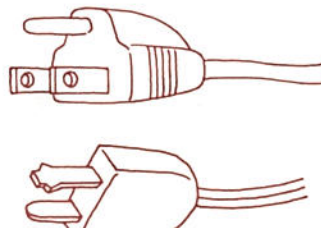

AC Receptacle — Check to make sure that the AC receptacle holds the power cord plug firmly and securely. If the power cord plug is loose, contact your electrician to replace the defective and unsafe AC receptacle.

